

Roto-moulded Table - Sand Filled and Floor Mounted




Table of Contents

Sand Filled Installation	1
Floor Mounted Installation	3

Sand Filled Installation


Items for Installation	
Supplied	
1 x Table base (Roto-moulded)	4 x M6 Stainless washers
1 x Wooden table top	1 x 100kg Polypropylene bag
1 x Sand cavity plug (Injection moulded)	1 x Heavy duty cable tie
4 x M6 x 40mm Stainless button head Torx screws	3 x M4 x 40mm Torx head self tapping screws
Required	
80kg of washed plaster sand	Torx head screw driver
Required Personnel	2

1

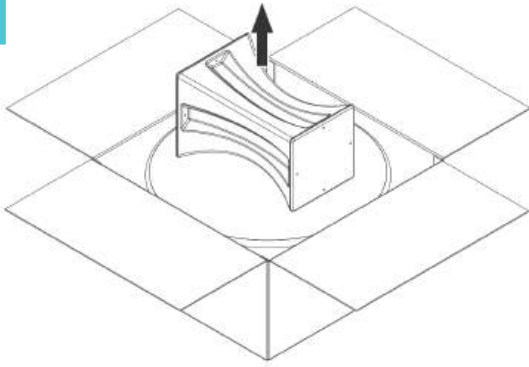


1. Unbox the table top and base and take it out of the plastic packaging. Discard packaging in a safe manner.

2

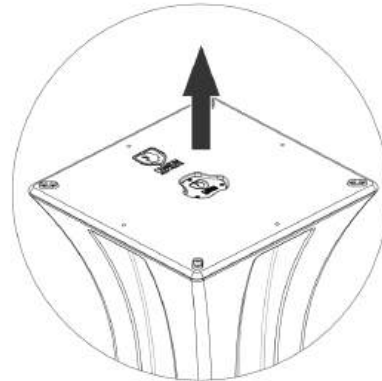


2. Flip the table base over so that the underside is accessible. Remove the sand cavity plug from the base.

3

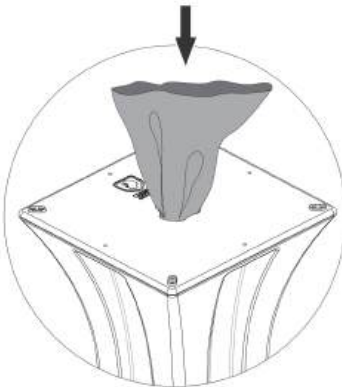


3. Insert the empty polypropylene bag into the cavity of the base of the chair. Allow a portion of the bag to protrude from the hole so that a “funnel” is created.


4

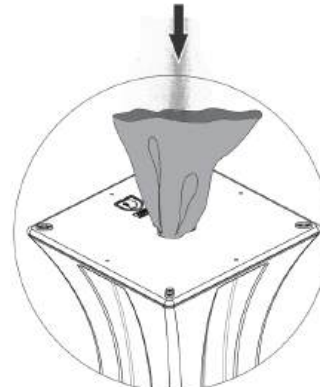

4. Fill the polypropylene bag with the 80kg of sand. Once filled, tie the end of the bag off with a heavy duty cable tie.

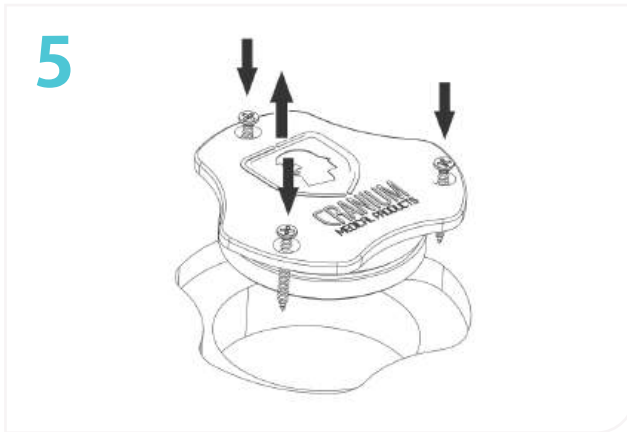

5. Push the bag into the cavity and replace the sand cavity plug. Secure the sand cavity plug into position with the M4 x 40mm Torx head self tapping screws.

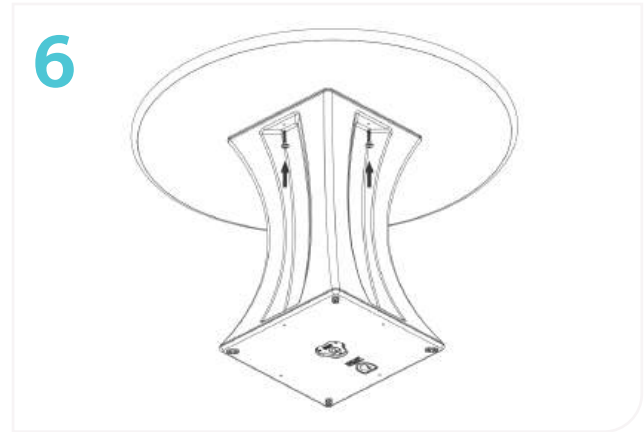


6. Once the sand cavity plug is secure, flip the base over onto its feet. Place the table top onto the base aligning the holes with the insert holes on the underside of the table top. Using the provided Torx security screws and a screw driver fasten the table base to the table top.

Floor Mounted Installation


Items for Installation	
Supplied	
1 x Table base (Roto-moulded)	4 x M8 Stainless washers
1 x Wooden table top	4 x M6 x 40mm Stainless button head Torx screws
4 x M8 x 60mm Stainless button head Torx screws	4 x M6 Stainless washers
Required	
Impact drill	Hammer
10mm Masonary drill bit	Torx head screw driver
Required Personnel	2

1

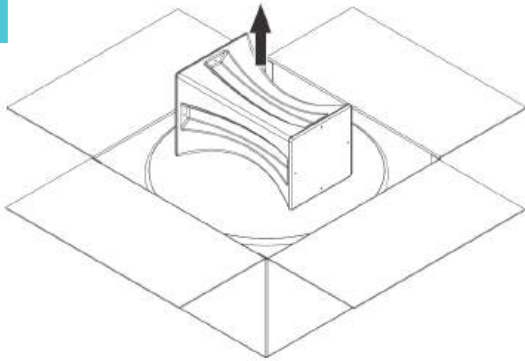


1. Unbox the table top and base and take it out of the plastic packaging. Discard packaging in a safe manner.

2

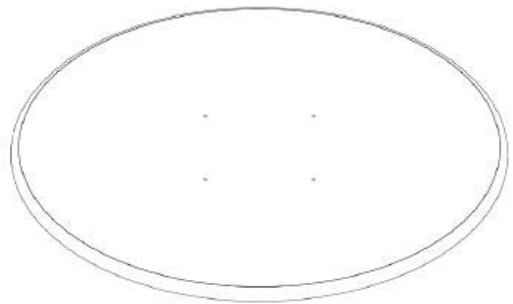


2. Place the table top face down on the floor. Be careful not to scratch the surface.

3

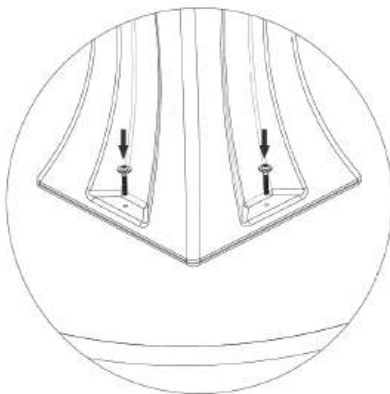


3. Using the provided Torx security screws and a screw driver fasten the table base to the table top.


4

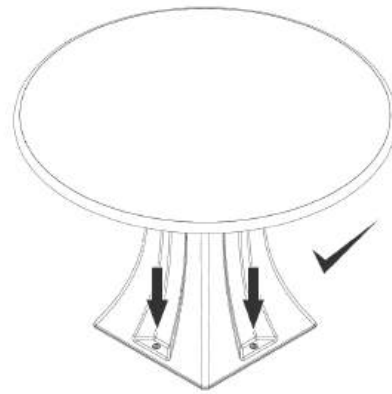

4. Place the table in its final position and mark all the holes as accurately as possible. Move the table to the side and drill all the holes to the depth of the Torx security anchor. Blow out as much dust as possible.

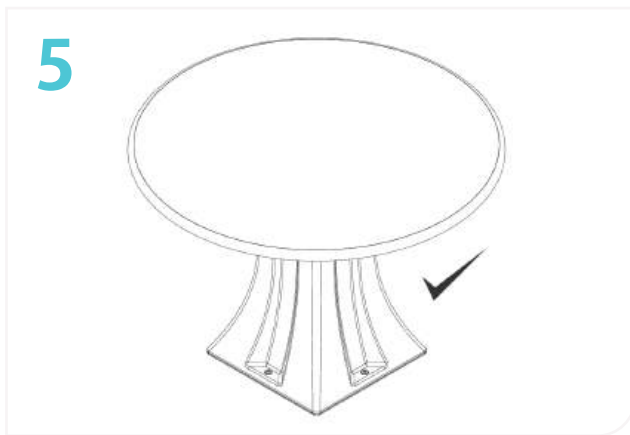

5. Place a plug into each hole hammering it in if needed. Slide the table back into position making sure all the holes line up.

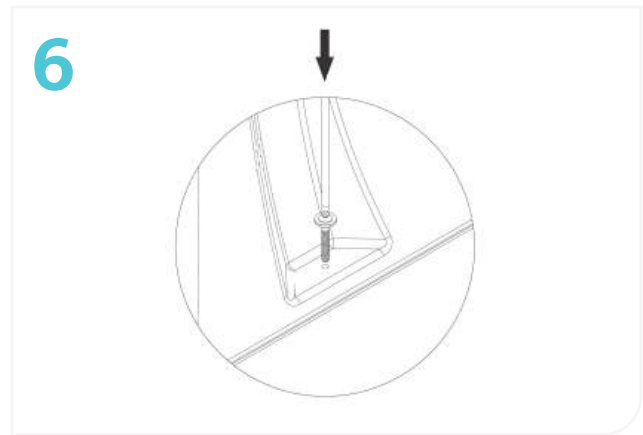

6. Using a Torx security screw driver tighten all the fasteners making sure the fasteners are flush with the table base.

Disclaimer:

All products must be fitted as per the directions detailed in the individual product Installation Instruction Document. Hipac takes no responsibility for incorrect installation/operation of the product. By purchasing this product, you are confirming that the product will be fitted as per the instructions.

Please note that Hipac offers a range of measures designed to reduce the risk of self-harm or suicide and does not offer any guarantee that it will not take place. The solutions have been designed as a deterrent only.

ABOUT HIPAC

Operating at the forefront of healthcare, we strive to redefine what's possible. We provide superior products, design expertise and total solutions to help create environments where nothing stands in the way of patient care.

Contact information



1800 75 93 93



info@hipac.com.au



www.hipac.com.au

 **Hipac**
We're here for life