


Taper Chair with Armrests - Sand Filled




Items for Installation	
Supplied	
1 x Taper chair with armrests (Roto-moulded)	1 x Heavy duty cable tie
1 x Sand cavity plug (Injection moulded)	3 x M4 x 40mm Torx head self tapping screws
1 x 100kg Polypropylene bag	
Required	
80kg of washed plaster sand	Torx head screw driver
Required Personnel	2



1. Place the chair roughly in it's final position.

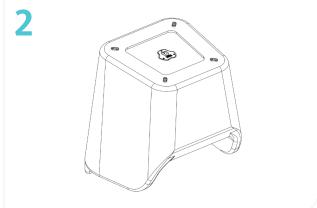

2. Flip the chair over so that the base of the chair is accessible.

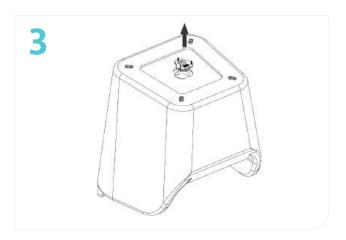


3. Remove the sand cavity plug from the base of the chair.



4. Insert the empty polypropylene bag into the cavity of the base of the chair. Allow a portion of the bag to protrude from the hole so that a "funnel" is created.



5. Fill the polypropylene bag with the 80kg of sand. Once filled, tie the end of the bag off with a heavy duty cable tie.

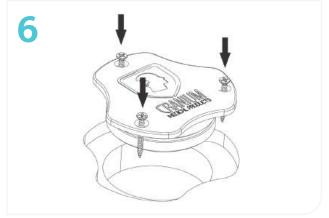

6. Push the bag into the cavity and replace the sand cavity plug. Secure the sand cavity plug into postion with the M4 x 40mm Torx head self tapping screws.







- 7. Once the sand cavity plug is secured and in its final position, clean up any excess sand.
- 8. Flip the chair back onto its base. This step will require 2 people.

Disclaimer:

All products must be fitted as per the directions detailed in the individual product Installation Instruction Document. Hipac takes no responsibility for incorrect installation/operation of the product. By purchasing this product, you are confirming that the product will be fitted as per the instructions.

Please note that Hipac offers a range of measures designed to reduce the risk of self-harm or suicide and does not offer any guarantee that it will not take place. The solutions have been designed as a deterrent only.

