



Wall Mounted Desk - Wall Mounted




Items for Installation	
Supplied	
1 x Wall desk (Roto-moulded)	4 x M6 x 80mm Stainless button head Torx screws
4 x M6 x 80mm Nail in anchors	4 x M6 Stainless washers
Required	
Impact drill	Hammer
8mm Masonary drill bit	Torx head screw driver
Spirit level	
Required Personnel	2

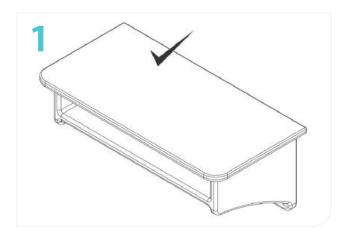

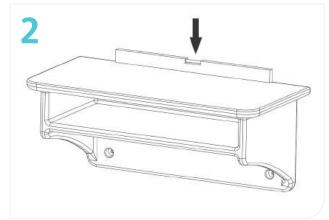


- Unbox the wall desk and all hardware included in the box. Place the desk in its intended position.
- Place your spirit level on the wall desk making sure it is level. Take your marker and mark all the mounting holes while someone holds the shelf in position.

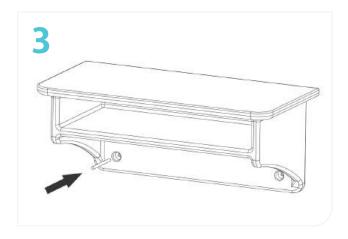




- 3. Use a pencil or permanent marker to mark the holes on the wall. Place the desk to the side.
- 4. Take your drilling machine and the 8mm drill bit and drill the marked out holes. Once the holes have been drilled, move the desk aside and insert the M6 nail in anchor plugs into the holes.



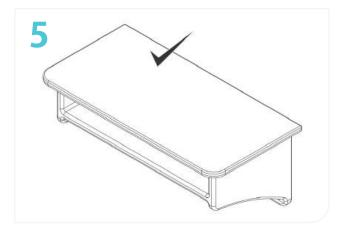

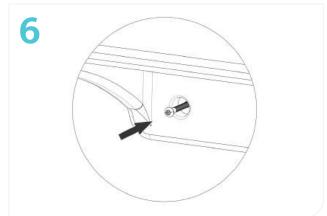

- 5. Place the wall desk back into its final position making sure the holes lines up with the holes in the wall desk.
- 6. Insert the M6 Torx screw into each ofthe holes and tighten using a Torx screw driver. Make sure the desk is secure against the wall.

Disclaimer:

All products must be fitted as per the directions detailed in the individual product Installation Instruction Document. Hipac takes no responsibility for incorrect installation/operation of the product. By purchasing this product, you are confirming that the product will be fitted as per the instructions.

Please note that Hipac offers a range of measures designed to reduce the risk of self-harm or suicide and does not offer any guarantee that it will not take place. The solutions have been designed as a deterrent only.

