



## Healsafe Toilet Paper Holder

### Installation Guide

The toilet paper holder is designed to be suicide and self harm resistant. Therefore it is important to follow this mounting description.

- The bracket should be mounted with two safety screws with a flat bottom head. The diameter of the screw head should be from 9.5 to 10 mm to fit the countersunk hole.
- The diameter of the screw threaded portion shall not exceed 5mm, this is the diameter of the holes. C-C between the holes is 40 mm.
- Make sure the screws have been pulled all the way to the bottom of the countersunk part.
- The installation should be done so that the bracket fits snug to the surface it is mounted to. Uneven surfaces must be avoided.

Check that no objects, rope or string can be inserted between the bracket and the wall.

- Note that the bracket should be mounted with the short end of the clamp up. Follow the instructions on the back of the bracket.

See illustration.



- The toilet paper holder shall not be mounted along the same horizontal line as an object with a supportive surface such as a cabinet, sink, door, shelf, etc., that is closer than 30 cm. See example 1

- When mounting two or more holders on the same wall the mounting description in illustration 2, 3 and 4 should be followed. When installing two paper holders on the same wall they should be mounted in a vertical or diagonal line of least 30 centimetres between the toilet paper holders.


-See example 2 and 3

- The paper holder shall not be mounted along the same horizontal line.


-See example 4

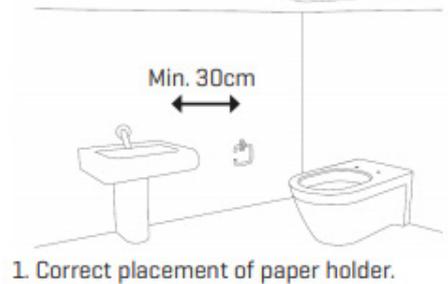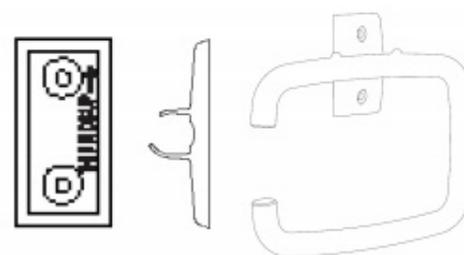

1. Correct placement of paper holder.

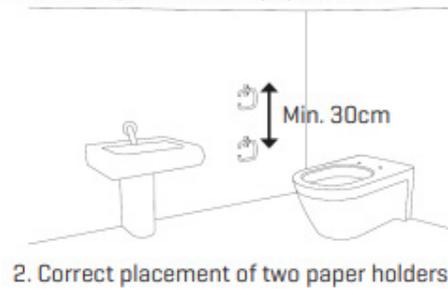

2. Correct placement of two paper holders.

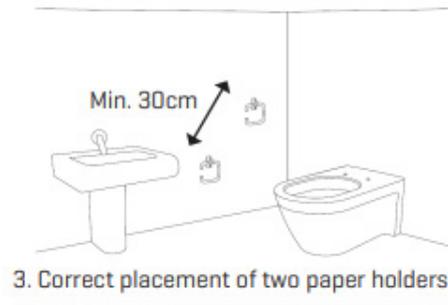

3. Correct placement of two paper holders



4. Incorrect placement of two paper holders.

### ABOUT HIPAC

We are an Australian healthcare company that guarantees to stand behind all our medical products, both manufactured and imported, because we're here for the life of our products and clients.

PO Box 797, 36 Long St. Goulburn NSW 2580, Australia  
P. +61 2 4823 0000 E. [info@hipac.com.au](mailto:info@hipac.com.au)

SYDNEY | MELBOURNE | BRISBANE | ADELAIDE | PERTH

[hipac.com.au](http://hipac.com.au)

ABN 27 600 353 688