


J-Trac Anti-Ligature Curtain Tracking

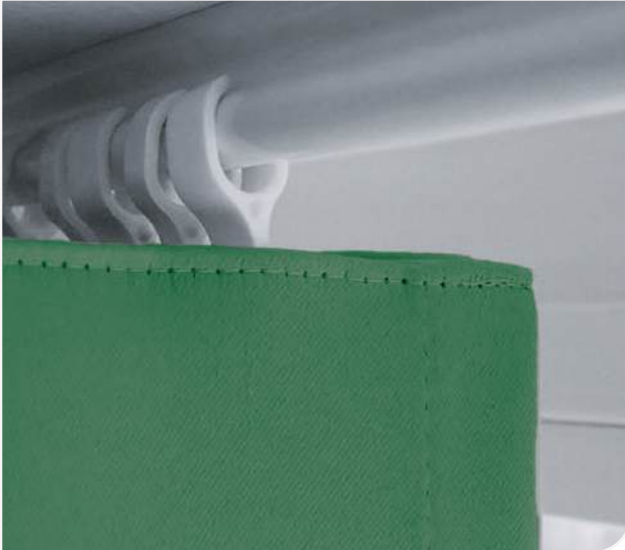

J-Trac Curtain Rail System

Curtains contribute with colour, warmth and improved acoustics. The J-Trac curtain rail system is developed to meet challenges in mental health and similar environments to foster a caring, safe and healing environment.

Offering the possibility to design an interior with curtains also creates a less institutional environment, it also allows for full control of daylight- an important factor for autonomy in line with Evidence Based Design EBD.

The rail's unique patented design resists the attachment of a ligature, unlike ordinary rails where the U-shaped profile creates a cavity to fasten a ligature. The robust rail is fixed securely to the ceiling/wall, preventing it from detaching and used for self-harm or weaponised.


The curtain attaches to the rail with specially designed runners/gliders/carriers, which are easily clipped on to the outside of the rail's profile and release when an abnormal weight is applied. The runners release according to the number of runners and the weight and size of the curtain.

The curtain rail solution consists of three parts: the rail, runners and end caps.

Examples



Curtain rail system
(window 1600mm).

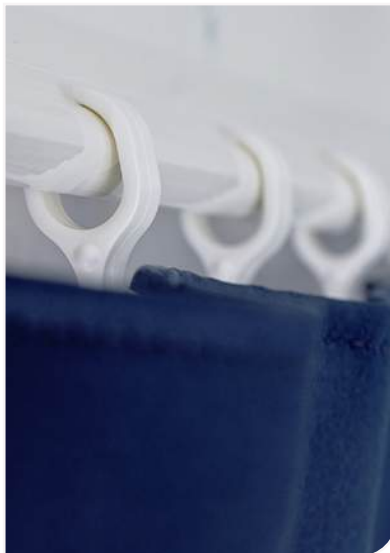

J-Trac curtain rail, wall
with J-trac runner.



J-Trac shower rail 90°
with J-Trac runner.

- 2800mm curtain rail.
- 2 end caps: left and right.
- 18 (2x9) gliders.
- 14 security screws.

Warranty

Rails and end caps

5 years - applies to normal use. Full warranty against manufacturing defect.

Runners

2 years - applies to normal use. Full warranty against manufacturing defects

Sustainability

The J-Trac curtain and shower rail system is extremely robust and durable. The rail and end cap are recycled as metal. Runner is recycled as plastic.

Tracking Kits (c/w end caps, screws, runners – Standard runners 8 per metre, Weighted Runners 4 per track)

Codes	143620	J-Trac Window Curtain Tracking Kit 1400mm - Wall Fix - Can be trimmed to suit
	143621	J-Trac Window Curtain Tracking Kit 1900mm - Wall Fix - Can be trimmed to suit
	143622	J-Trac Window Curtain Tracking Kit 2800mm - Wall Fix - Can be trimmed to suit
	143623	J-Trac Window Curtain Tracking Kit 3800mm - Wall Fix - Can be trimmed to suit
	143624	J-Trac Window Curtain Tracking Kit 5750mm - Wall Fix - Can be trimmed to suit
	143625	J-Trac Window Curtain Tracking Kit 1400mm - Ceiling Fix - Can be trimmed to suit
	143626	J-Trac Window Curtain Tracking Kit 1900mm - Ceiling Fix - Can be trimmed to suit
	143627	J-Trac Window Curtain Tracking Kit 2800mm - Ceiling Fix - Can be trimmed to suit
	143628	J-Trac Window Curtain Tracking Kit 3800mm - Ceiling Fix - Can be trimmed to suit
	143629	J-Trac Window Curtain Tracking Kit 5750mm - Ceiling Fix - Can be trimmed to suit
	143662	J-Trac - Shower Curtain Track Kit - 1450 x 1450mm - Can be trimmed to suit
	143399	J-Trac - Shower Curtain Track Only - 1450 x 1450mm (Track Only)

Rails

Codes	143170	J-Trac - Curtain Rail - Ceiling Fix - 5750mm length (Track Only)
	143171	J-Trac - Curtain Rail - Wall Fix - 5750mm length (Track Only)
	143399	J-Trac - Shower Curtain Track Only - 1450 x 1450mm (Track Only)

End Caps

Codes	143172	J-Trac - End Stop - Ceiling Fix - Right
	143173	J-Trac - End Stop - Ceiling Fix - Left
	143174	J-Trac - End Stop - Wall Fix - Right
	143175	J-Trac - End Stop - Wall Fix - Left
	143400	J-Trac - Shower Track End Stop - Right
	143401	J-Trac - Shower End Stop - Left

Runners

Codes	143631	J-Trac - Runner with hole - White - single
	143177	J-Trac - Runner with hole - White - pack 10
	143176	J-Trac - Runner with hole - White - pack 200
	143183	J-Trac - Runner with hole -White - Weighted – single
	143182	J-Trac - Runner with hole -White - Weighted – pack 200

Mounting

Code	143630	8G J-Track Security Screw Pack: 25x Timber Screws and 1x Driver (Pearl White Head)
<p>Rail and end stops are tightly fixated with security screws to the wall or ceiling mount. Mount the rails with security screws (143630).</p> <p>(The mounting instructions are to be followed to ensure correct function).</p>		

Materials

- rail and end cap - Powder coated aluminium.
- runners - Plastic.

Maintenance

All parts can be cleaned with detergent suitable for the material.

Technical Data

Rail lengths are available up to 5750mm.

- rail ceiling: D 26mm, H 24mm.
- end cap ceiling: W 71mm, H 27mm.
- rail wall: D 35mm, H 58mm.
- end cap wall: W 109mm, H 37mm.



J-Trac curtain rail, ceiling and J-Trac shower rail with J-Trac runners.

Recommended Runner Spacing

7-8 runners per metre generally, where runners exceed 12 per track application specific testing is recommended (contact Hipac for assistance). Large, weighted runners may be used at one or both ends as required for added stability.

Fabric Recommendation

Lightweight <300gsm.

Load Release Guidance

Runners

- 1 small runner – median release weight - 1.4kg.
- 1 large weighted runner – median release weight – 3.8kg.



Window Track Installations

- 16 runners – median release weight – 4.5kg.
- 10 runners + 2 weighted runners – median release weight – 8.2kg.

Shower Track Installations

- 18 runners, 2.3m wide shower curtain – median release weight – 4.6kg.
- 16 runners, 2.3m wide shower curtain + 2 weighted runners - median release weight – 7kg.





J-Trac shower rail with J-Trac end cap ceiling, right, J-Trac runners and shower curtain.

This product is patented and tested at RISE/SP in Sweden. Made in Sweden.

Disclaimer:

All products must be fitted as per the directions detailed in the individual product Installation Instruction Document. Hipac takes no responsibility for incorrect installation/operation of the product. By purchasing this product, you are confirming that the product will be fitted as per the instructions.

Please note that Hipac offers a range of measures designed to reduce the risk of self-harm or suicide and does not offer any guarantee that it will not take place. The solutions have been designed as a deterrent only.

ABOUT HIPAC

Operating at the forefront of healthcare, we strive to redefine what's possible. We provide superior products, design expertise and total solutions to help create environments where nothing stands in the way of patient care.

Contact information



1800 75 93 93



info@hipac.com.au



www.hipac.com.au

 **Hipac**
We're here for life