



#### Product Features:

- Releases at max 5kg load.
- 360 degree release
- Flexible material prevents physical injury.

#### Technical Data

Size: 52mm[H], 31.5mm[W], 21.5mm[D]  
Load release tests of the hook using a string in vertical and horizontal directions releases at max 5 kg.



Despite the hook's normalised design the unique choice of materials, combined with specific design details makes it both safe and functional. The variety of colours offers the opportunity for a tailored interior design.

The hook holds the weight of an item of clothing or a towel, but when an extra force is applied it releases. The hook does not break but bends, forcing the ligature to slide off. Releasing in all directions, it can be placed close to doors etc.

#### Assortment

145929	Hook Max5, white	5 pcs
145930	Hook Max5, grey	5 pcs
145931	Hook Max5, black	5 pcs
145932	Hook Max5, beige	5 pcs
145933	Hook Max5, magenta	5 pcs
145934	Hook Max5, white	50 pcs
145935	Hook Max5, grey	50 pcs
145936	Hook Max5, black	50 pcs
145937	Hook Max5, beige	50 pcs



#### Materials

PC/ABS [core] and TPU [outer part]

#### Mounting

Mount to a flat surface to obtain a tight fit between the hook and the wall to hinder the attachment of a string or similar.

#### Maintenance


Resistant to most detergents and alcohol.

#### Sustainability

The hook's design and material are chosen to extend the product's life time. Recycle as hard plastic.



Backside with yellow core. Shell in white and magenta

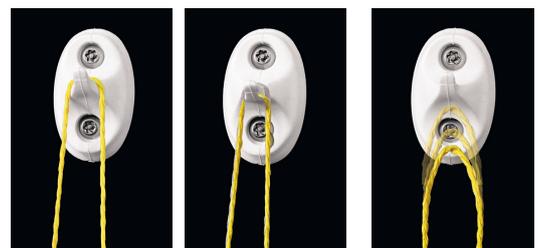

The hook does not break but bends, forcing the ligature to slide off whilst retaining shape and function.