




Concealed Magnetic Catch

Product Datasheet

Heavy Duty Concealed Magnetic Catch suitable for full size doors [e.g wardrobe/cupboard, double internal doors.]

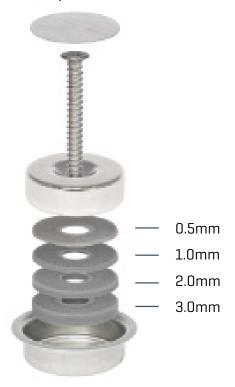




Product Codes:


143288 - for timber door/timber frame applications.


143289 - for timber door/metal frame applications c/w SS frame plate.

- Can be used anywhere a roller/ball catch etc. would normally be fitted.
- · As magnets don't touch (after installation)
 - the catch will never wear out!
 - Lifetime quarantee (for magnetism).
 - can be painted over.
- No latch noise when opening and shutting door (unlike a roller/ball catch)
- Completely concealed when door closed, no unsightly protruding strike plate lip (unlike a roller/ball catch).
- Can be used to help keep problem doors shut (e.g. with weak door closers, electric strikes, weak roller mortice locks, double sliding doors).
- Quick and easy to install No chiseling required.
 Ezifit s/steel housing cup automatically sets the magnets perfectly parallel to each other, essential for precise power adjustment.
- Power adjustment packers increase magnetic holding strength by inserting power adjustment packers (inside housing, under magnet) as required. (See picture). Supplied in four sizes; 0.5mm - 3mm thick, for precise power adjustment.

Power Adjustment Guide

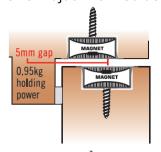


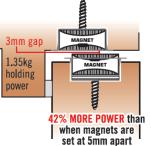

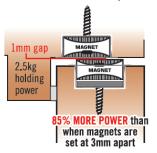



- Self Adhesive/Magnetic Cover Plate (Brushed S/Steel)
 - Protects magnets from impact damage during installation.
 - Protects magnets from corrosion.
 - Conceals magnet and screw head for a more attractive finish.
- Poron Xrd Foam impact absorption pad (sold separately)
 - Use (esp. with double doors) to further reduce impact noise and bouncing of door on frame when shutting.
 - Low compression set After impact, foam pad will return to its original thickness indefinitely.

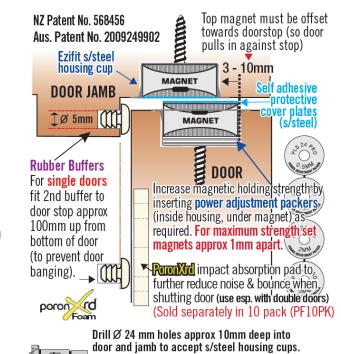

(Recommended - Precision FB-24 Forstner Drill Bit)





