



## Ensuite Door

SKU: 138150

Safehinge Primera

Privacy and dignity with no known ligature points

### Patient privacy and dignity with unrivaled safety

- Leaves detach if a ligature is attempted, at a minimum of 3kg load.
- Self-locating design ensures easy leaf reattachment.
- The strong magnets and pivot mechanism avoid leaves detaching during day-to-day use.
- Magnets cannot be removed or digested.
- Retrofits in under 60 minutes.




**Learn More**

Watch the video [here](#):



### Our Lifesaving Solution

As well as setting new standards for safety and design, our ensuite door restores dignity and independence. It's cost effective too, compared to full doors with door-top alarms and was commended as a "revolutionary, lifesaving solution" by IMHN 2017 judges.

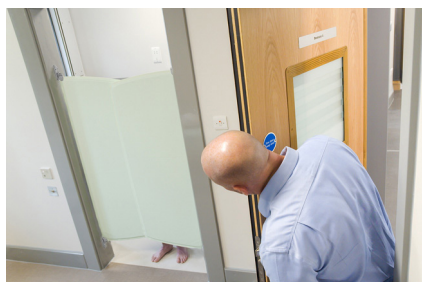

#### Self locating design; easy reattachment

The improved design ensures that leaves stay firmly in place during day-to-day use and now include self-locating magnets in frame, removing the need to bend down to reattach the leaves if incident occurs.



#### Enables partial observation; provides dignity

Like cubical doors, the door acts as a partial visual screen to preserve service user dignity. It also allows observation of head and feet to give clinicians peace of mind.



#### Enhances safety

Tested to TS001 standards, the door has no known ligature points on the pivots or leaves. The leaves detach if a ligature is attempted, but stay in place during day-to-day use. When detached, the leaves are ineffective weapons and are soft and lightweight.



## Ensuite Door


### Safehinge Primera

Leaves overlap for privacy

Standard sizes to ensure short lead times

Leaves available in a choice of colours and images, allowing patients to personalise bedrooms

Can be fitted to existing door frames in under 60 minutes, minimising disruption

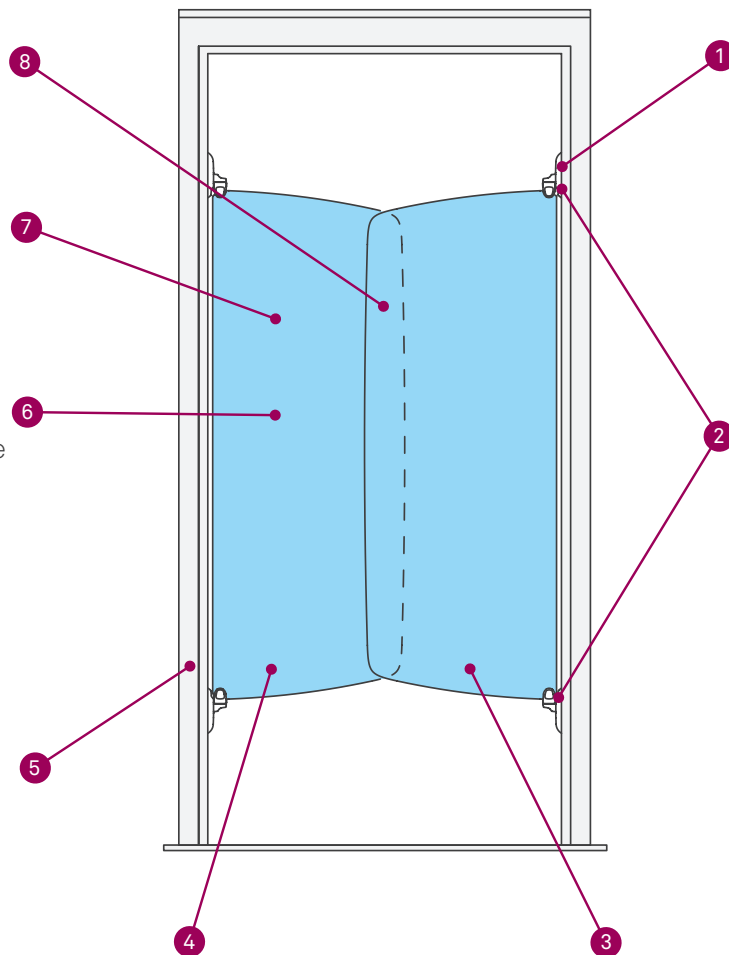

Magnetic load release eliminates known ligature risks

Top and bottom magnets are self-locating and offer superior hold, minimizing unwanted detachments and removing the need to bend down if the leaves do need reattached

Individual leaves are narrow and flexible, making ineffective weapons or shields

Leaves are fire retardant and water-resistant

#### ABOUT HIPAC

We are an Australian healthcare company that guarantees to stand behind all our medical products, both manufactured and imported, because we're here for the life of our products and clients.

PO Box 797, 36 Long St. Goulburn NSW 2580, Australia  
P. +61 2 4823 0000 E. [info@hipac.com.au](mailto:info@hipac.com.au)

SYDNEY | MELBOURNE | BRISBANE | ADELAIDE | PERTH

[hipac.com.au](http://hipac.com.au)

ABN 27 600 353 688