



### Product Features:

- Suicide resistant hooks in appealing design and colours.
- No ligature fixation possibility, as string will release at an abnormal vertical load.
- Easy to install, gives a tight fit to the wall by the design of the backside.
- Several colours, customised colour on request.



Despite the hook's normal appearance, and attractive design, the meticulous choice of material combined with very specific design details makes it both safe and functional. The patented self-harm and suicide resistant hook is designed with the aim to add colour and design to the care environment, whilst fulfilling the need for safety. The hook holds the weight of several garments or towels, but when an excessive force is applied in a downwards direction its anti-ligature function releases. The hook does not break but bends, forcing the ligature to slide off.

### Technical Data

Size 65mm[H] x 20mm[W] x 35mm[D]

Vertical load tests on the hook with a 1mm string, a shoelace 8 x 1mm or a rope made from cotton sheets released at between 8.5 to 9.8kg.

Tested at RISE/SP to withstand 1000 releases, still retaining its shape and function. Patented.

### Mounting


Hooks are mounted on a flat wall surface to obtain a tight fit to the wall and thus prevent the possibility of attaching a string or the like between the wall and the hook.

### Maintenance

Hooks can be cleaned with suitable detergent. Resistant to cleaning agents.

### Materials

Plastic

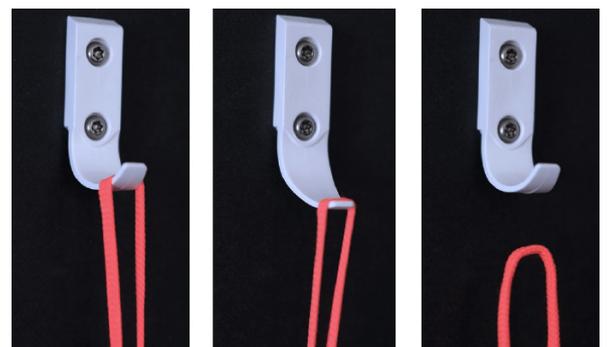

The hook does not break but bends, forcing the ligature to slide off. The hook retains shape and function.

### Assortment

- 142871 Hook, white
- 142872 Hook, black
- 142873 Hook, red
- 142874 Hook, grey
- 142875 Hook, blue

