



Anti-Ligature Safe Support Backrest and Pad


Datasheet

Product Code: 145769

Ideal replacement for Doc M backrest where a reduced ligature design is required:

Product Features:

- Extremely tough 1.2mm mild steel housing.
- White or blue antibacterial powder coating.
- Angular design resists ligature attachment.
- Comfortable well-padded cushioned back support is made from a fire retardant foam and covered with a ripstop vinyl which is seam welded to resist water penetration.
- The pad is self-supported within a recess but can easily be removed for cleaning [NB: adheres to recessed housing using magnetic attraction].


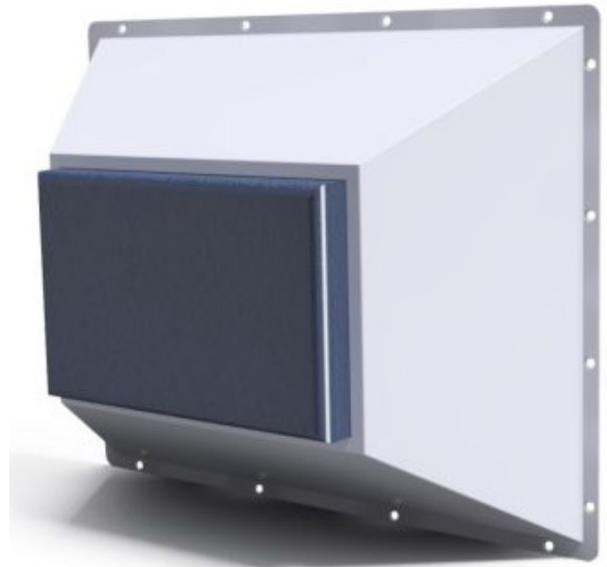


Installation

- Supplied with 1 ¼" size 8 six lobe pin security screws.
- Recommended to be fitted using a bead of anti-pick around the edge.

Cleaning

- Use mild detergent on a damp cloth.

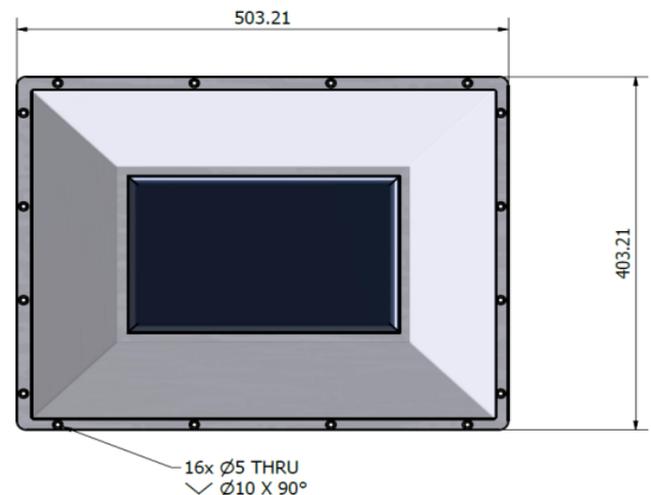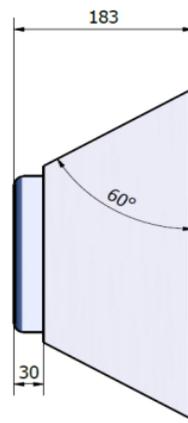

ABOUT HIPAC

We are an Australian healthcare company that guarantees to stand behind all our medical products, both manufactured and imported, because we're here for the life of our products and clients.

PO Box 797, 36 Long St. Goulburn NSW 2580, Australia
P. +61 2 4823 0000 E. info@hipac.com.au

SYDNEY | MELBOURNE | BRISBANE | ADELAIDE | PERTH

hipac.com.au

ABN 27 600 353 688