




Steel Ventilation Grille

Ligature resistant grille was designed in conjunction with a high secure site in the mental health sector, for robustness.

- made from 430 stainless steel general use or 430 stainless steel for bathrooms/wetrooms
- powder coated finish RAL 9003 White (available in all RAL Colours)
- 2.2mm ventilation holes, pitch 5mm
- other sizes available upon request
- recommended to be fitted anti-pick sealant.

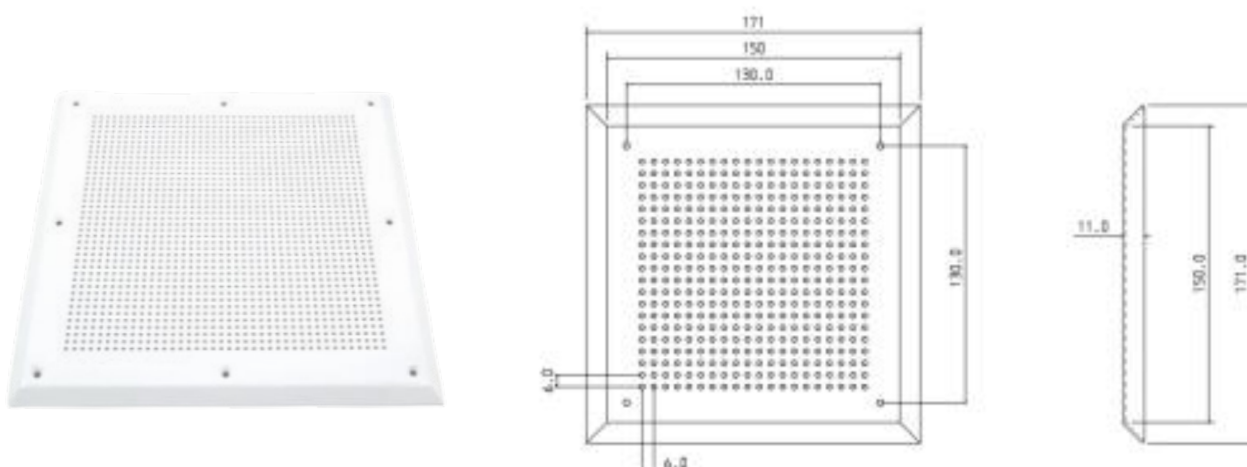

Size	430 Stainless Steel	Pressure Drop	Free Airspace	Weight Kg
150x150mm	145542	46 l/s	400	1.5
200x200mm	145543	75 l/s	625	1.8
250x250mm	145544	115 l/s	1225	1.9
300x300mm	145545	170 l/s	1600	2
350x350mm	145546	234 l/s	2025	2.5
400x400mm	145547	310 l/s	3600	3
450x450mm	145548	396 l/s	4225	3.5
500x500mm	145549	493 l/s	5625	4
550x550mm	145550	598 l/s	7225	5
600x600mm	145551	715 l/s	9025	4.6



The anti-ligature design features of this product are not intended to replace or substitute the need for necessary supervision of those who may be at risk, or for other necessary protective measures to be taken in the specific circumstances of usage. Hipac does not claim any product to be totally ligature free for make claim that they cannot be damaged with regard to anti-vandal feature. It is therefore the customers responsibility to ensure the suitability of the product for the environment in which they are to be fitted.

Ventilation Grille Cleaning

1. Firstly unscrew the security screws that hold the grille to the frame.
2. Remove the grille.
3. Using a clean damp cloth with a mild detergent, wipe both sides of the grille.
4. Blow through the holes if required to clear any further dirt.
5. Lastly refit the revers of the above.

ABOUT HIPAC

We are an Australian healthcare company that guarantees to stand behind all our medical products, both manufactured and imported, because we're here for the life of our products and clients.