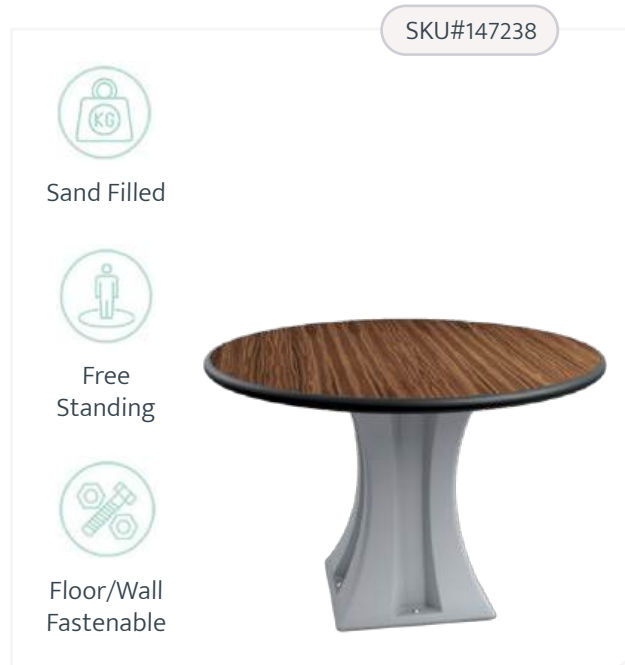


Roto-moulded Table

Key Features

- seamless product with safely rounded corners - no joins.
- modern aesthetic design with therapeutic colours.
- specialised polymer for impact and durability.
- reduced ligature design.
- easy to clean.
- anti-stash.



Options









- sand-filled so products can not be moved easily (only with extreme force).
- free standing or floor mounted.

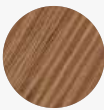
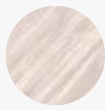
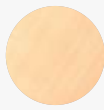
Material & Fabrication

Rotomoulding is a manufacturing technique that involves heating and rotating a hollow mould to evenly distribute LLDPE plastic material. This process results in strong, durable & seamless furniture pieces that allows us to meet the unique needs & challenges of mental health environments. The seamless construction reduces the risk of hiding places for contraband or self harm objects & the rounded edges/corners minimize potential risks. The materials used in the moulding are flame retardant, easy to clean, resistant to damage and designed to withstand heavy duty usage.

Base	
Packaged Dimensions	800mm x 540mm x 540mm
Dimensions	773mm x 520mm x 520mm
Material	LLDPE
Weight	6.5kg, sandfilled extra +/- 65kg

Top	
Packaged Dimensions	900mm x 900mm x 38mm / 1200mm x 1200mm x 38mm
Dimensions	900mm x 900mm x 35mm / 1200mm x 1200mm x 35mm
Material	MDF Board with a laminate table top finish & injection moulded edging
Weight	8kgs (900mm x 900mm) / 13kg (1200mm x 1200mm)

Base Colours					
					
Gull Wing	Birch Grey	Granite	Walk Away	Torres Blue	Basalt Gray
					
Dearley	Hear Me Roar	Endless Summer	Night Out	Blue Crane	Peach Melba

Top Wood Grains		
		
Verona Walnut	Country Oak	Classic Maple

Cleaning Instructions

To remove any dirt use a disposable wipe and a warm solution of neutral detergent. Avoid using abrasive materials or cleaning agents or steam cleaning. Bleach & chlorine disinfectant can be used but please use it with caution. Avoid placing the product in close proximity to any heat sources including the sun.

Warranty Period

- 5 years on roto-moulded/hard plastics.
- 2 years on mattresses and soft fabrics.



Disclaimer:

All products must be fitted as per the directions detailed in the individual product Installation Instruction Document. Hipac takes no responsibility for incorrect installation/operation of the product. By purchasing this product, you are confirming that the product will be fitted as per the instructions.

Please note that Hipac offers a range of measures designed to reduce the risk of self-harm or suicide and does not offer any guarantee that it will not take place. The solutions have been designed as a deterrent only.

ABOUT HIPAC

Operating at the forefront of healthcare, we strive to redefine what's possible. We provide superior products, design expertise and total solutions to help create environments where nothing stands in the way of patient care.

Contact information



1800 75 93 93



info@hipac.com.au



www.hipac.com.au

