


Hipac Door Grille Set

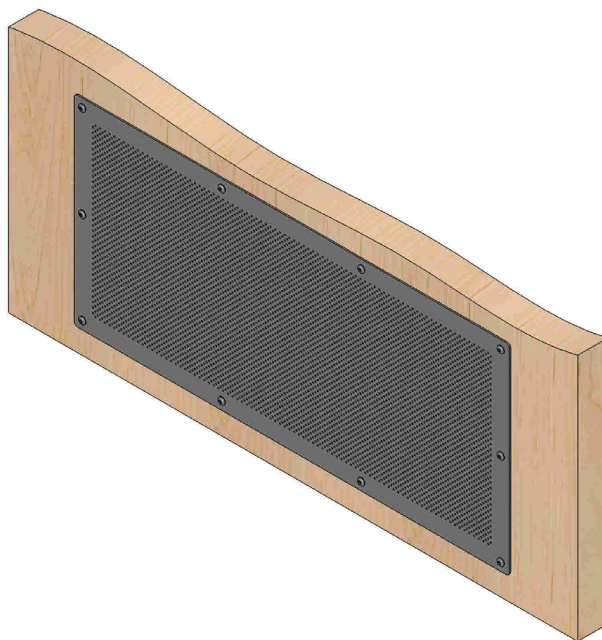

The Hipac Door Grille Set offers a durable alternative to traditional door grilles, specifically engineered to meet the demanding requirements of mental healthcare facilities. Manufactured from high-quality powder-coated steel, it is built to withstand impact and abuse, ensuring long-lasting performance and safety.

Key features:

- constructed from robust powder-coated steel for enhanced durability.
- impact resistant and capable of withstanding abuse.
- perforated design allows airflow whilst minimising ligature and self-harm risk.



Installation Instructions

Included in the pack

2 x grille plates

10 x back-to-back security fixings (suits door leaf between 40-50mm)

1. Prepare door leaf with cutout as shown in the drawing below.
2. Offer up the grilles to either side of the door leaf, using the supplied security fixings to secure this through the door as shown in the diagram below.

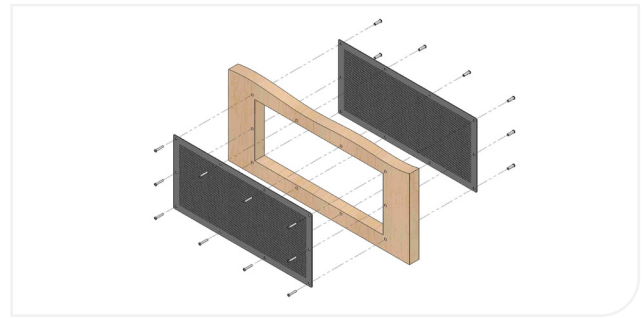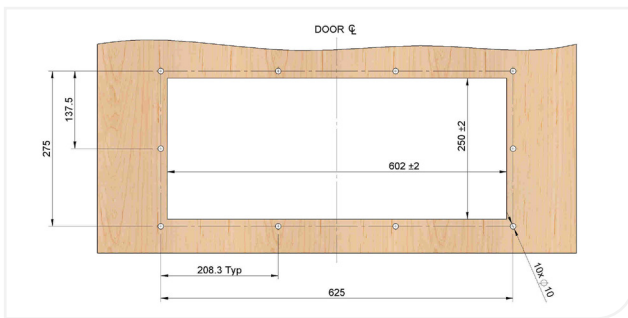

2. Once securely fitted to the door leaf ensure there are no gaps between the grilles and the surface of the door. Any gaps should be filled with anti-pick caulking.

Warranty

Hipac Healthcare warrants that the Door Grille Set will be free from defects in material and workmanship for a period that is no longer than the lifespan of the original door it was installed upon until a period of five years from date of purchase. The warranty does not cover any damage caused by inappropriate use, abuse or misuse. The warranty does not cover any malfunction or failure of the product that has been caused by poor or incorrect installation.

Disclaimer:

All products must be fitted as per the directions detailed in the individual product Installation Instruction Document. Hipac takes no responsibility for incorrect installation/operation of the product. By purchasing this product, you are confirming that the product will be fitted as per the instructions.

Please note that Hipac offers a range of measures designed to reduce the risk of self-harm or suicide and does not offer any guarantee that it will not take place. The solutions have been designed as a deterrent only.

ABOUT HIPAC

Operating at the forefront of healthcare, we strive to redefine what's possible. We provide superior products, design expertise and total solutions to help create environments where nothing stands in the way of patient care.

Contact information



1800 75 93 93



info@hipac.com.au



www.hipac.com.au

 **Hipac**
We're here for life