

## Anti-Ligature Safe Support Backrest and Pad

The Hipac Anti-Ligature Safe Support Backrest provides support to less-abled individuals in washrooms and bathrooms, minimising the risk of harm. It is an ideal replacement for a standard backrest where a reduced-ligature design is required.

### Product Features

- extremely tough 1.2mm mild-steel housing.
- white or blue antibacterial powder coating.
- angular design resists ligature attachment.
- comfortable, well-padded cushioned back support made from fire-retardant foam and covered with ripstop vinyl, which is seam-welded to resist water penetration.
- the pad is self-supported within a recess but can be easily removed for cleaning (NB: adheres to recessed housing using magnetic attraction).

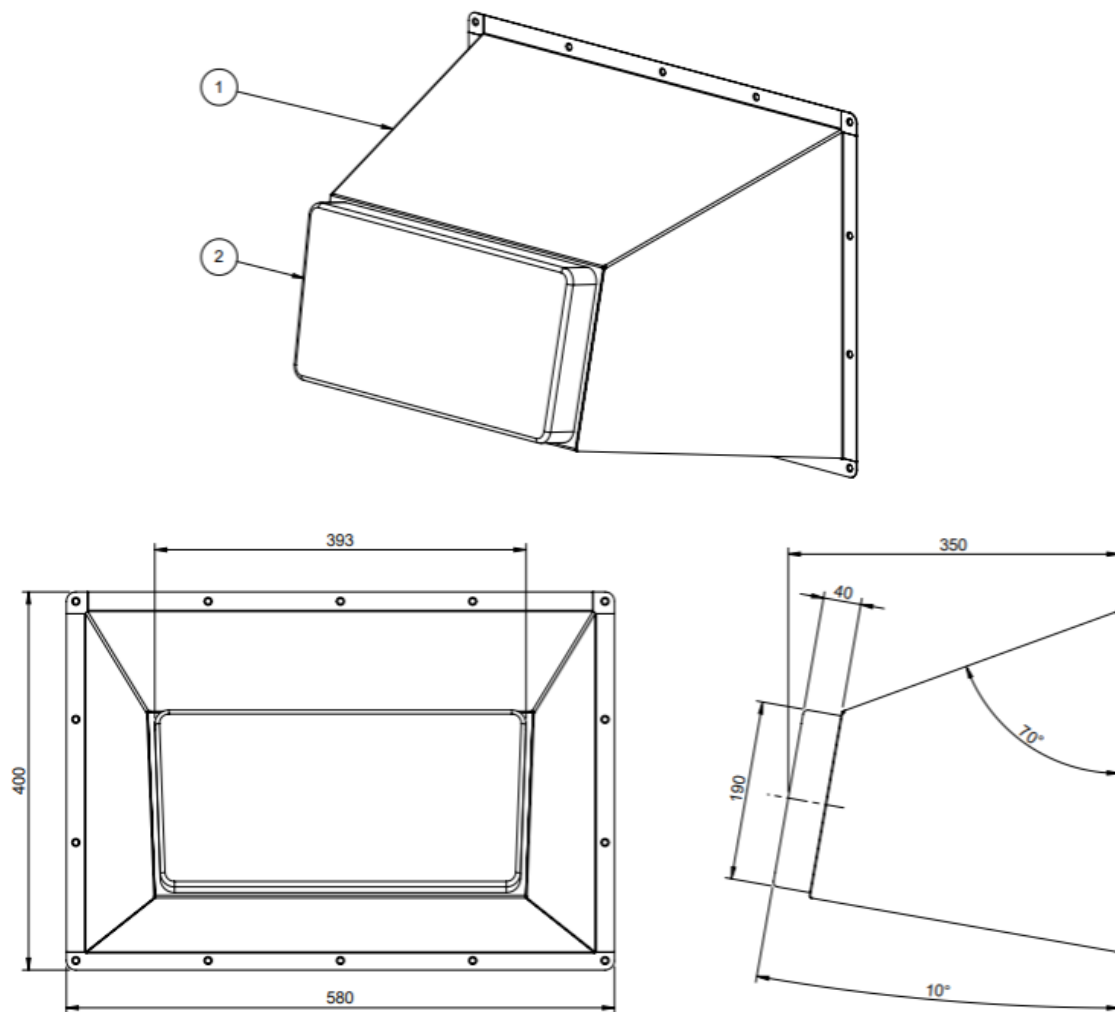


### Installation

- supplied with 1 1/4" size 8 six lobe pin security screws.
- recommended to be fitted using a bead of anti-pick around the edge.

### Cleaning

- use mild detergent on a damp cloth.

**Notes:**

1. Pad is magnetically secured to base. Locate in centre of flat area.

**Disclaimer:**

All products must be fitted as per the directions detailed in the individual product Installation Instruction Document. Hipac takes no responsibility for incorrect installation/operation of the product. By purchasing this product, you are confirming that the product will be fitted as per the instructions.

Please note that Hipac offers a range of measures designed to reduce the risk of self-harm or suicide and does not offer any guarantee that it will not take place. The solutions have been designed as a deterrent only.

**ABOUT HIPAC**

Operating at the forefront of healthcare, we strive to redefine what's possible. We provide superior products, design expertise and total solutions to help create environments where nothing stands in the way of patient care.

**Contact information**

1800 75 93 93



info@hipac.com.au



www.hipac.com.au

 **Hipac**  
We're here for life