


## Metal Faced Access Panel - Picture Frame



**Walls & Ceilings**

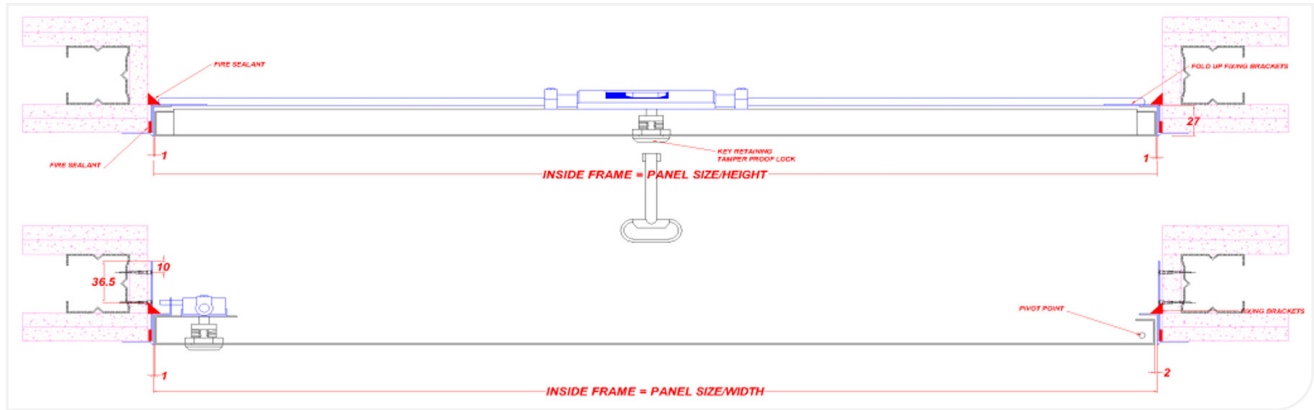

**No Airtight Rating**



**No Acoustic Rating**



**Picture Frame**

This panel is designed to fit into the structural membrane of a jointless plasterboard wall and ceiling system. It is manufactured with a 25mm picture frame. The panel has a metal-faced door. The panel's door leaf is locked in place via a 3-point lock as standard. Other lock options are available upon request. The panel is powder-coated RAL 9010, 30% gloss. Other colours are available upon request.

### Tests

- the panel is non acoustic rated.
- the panel is not air pressure tested.

### Composition & Manufacture

The Metal Faced Access Panel is manufactured from Zintec Steel with a 0.9mm thick door and a 0.9mm thick frame.

## Fitting

Make sure the structural opening is at least 7mm larger than the panel size (back of frame size). E.g., a 600x600mm panel size requires a 607x607mm hole size. Remove the door from the frame and place the frame into the set hole. Fix through the appropriate fixing holes within the frame, folding up fixing tabs and ensuring the frame is pushed up against the structural opening surround. Check the frame is square by measuring corner to corner. Refit the door and lock in place; the door and frame should be flush. Independent bracing or support may be required to take the weight of the Access Panel.

### Disclaimer:

All products must be fitted as per the directions detailed in the individual product Installation Instruction Document. Hipac takes no responsibility for incorrect installation/operation of the product. By purchasing this product, you are confirming that the product will be fitted as per the instructions.

Please note that Hipac offers a range of measures designed to reduce the risk of self-harm or suicide and does not offer any guarantee that it will not take place. The solutions have been designed as a deterrent only.

### ABOUT HIPAC

Operating at the forefront of healthcare, we strive to redefine what's possible. We provide superior products, design expertise and total solutions to help create environments where nothing stands in the way of patient care.

#### Contact information



1800 75 93 93



info@hipac.com.au



www.hipac.com.au

