

Anti-Ligature Hook - Max 5kg

Product Features

- releases at max 5kg load.
- 360 degree release.
- flexible material prevents physical injury.

Technical Data

Size	52mm(H), 31.5mm(W), 21.5mm(D)
Material	PC/ABS (core) and TPU (outer part)
Load release tests of the hook using a string in vertical and horizontal directions releases at max 5kg.	



Despite the hook's normalised design, the unique choice of materials, combined with specific design details, makes it both safe and functional. The variety of colours offers the opportunity for a tailored interior design.

The hook holds the weight of an item of clothing or a towel, but when an extra force is applied, it releases. The hook does not break but bends, forcing the ligature to slide off. Releasing in all directions, it can be placed close to doors, etc.

Assortment

Codes	145929	Hook Max5, white, 5pcs
	145930	Hook Max5, grey, 5pcs
	145931	Hook Max5, black, 5pcs
	145932	Hook Max5, beige, 5pcs
	145933	Hook Max5, magenta 5pcs
	145934	Hook Max5, white, 50pcs
	145935	Hook Max5, grey, 50pcs
	145936	Hook Max5, black, 50pcs
	145937	Hook Max5, beige, 50pcs






Mounting

Mount to a flat surface to obtain a tight fit between the hook and the wall to hinder the attachment of a string or similar.

Maintenance

Resistant to most detergents and alcohol.

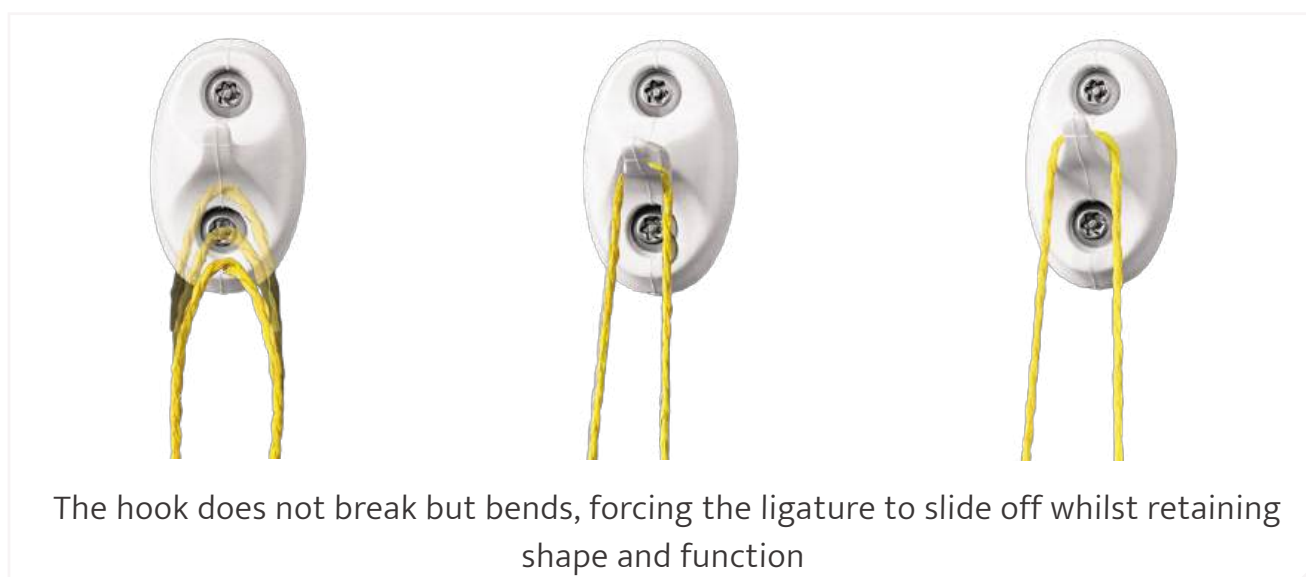

Sustainability

The hook's design and material are chosen to extend the product's life time. Recycle as hard plastic.

Disclaimer:

All products must be fitted as per the directions detailed in the individual product Installation Instruction Document. Hipac takes no responsibility for incorrect installation/operation of the product. By purchasing this product, you are confirming that the product will be fitted as per the instructions.

Please note that Hipac offers a range of measures designed to reduce the risk of self-harm or suicide and does not offer any guarantee that it will not take place. The solutions have been designed as a deterrent only.

ABOUT HIPAC

Operating at the forefront of healthcare, we strive to redefine what's possible. We provide superior products, design expertise and total solutions to help create environments where nothing stands in the way of patient care.

Contact information



1800 75 93 93



info@hipac.com.au



www.hipac.com.au

