


SECURASTOP Operable Frame Stop



SKU#		
148003	SECURASTOP 2100mm Operable Frame Stop c/w Lifeline Keyway Primed Timber	(suits figure 1 handed doorset)
148004	SECURASTOP 2100mm Operable Frame Stop c/w Lifeline Keyway Primed Timber	(suits figure 2 handed doorset)
148100	SECURASTOP 2400mm Operable Frame Stop c/w Lifeline Keyway Primed Timber	(suits figure 1 handed doorset)
148101	SECURASTOP 2400mm Operable Frame Stop c/w Lifeline Keyway Primed Timber	(suits figure 2 handed doorset)

For anti-barricade solutions

The SECURASTOP is an effective solution to overcome barricade situations when installed in combination with a double swing hinge. It is a full-length, frame-mounted stop that, during normal use, locks securely to the frame, preventing the outward swing of the door leaf. In the event of a barricade, the SECURASTOP can be unlocked and rotated out of the way of the doorway, allowing the door leaf to swing outward away from the barricade and allowing access to the room. It is well suited to bedroom doors within mental health applications and similar applications.

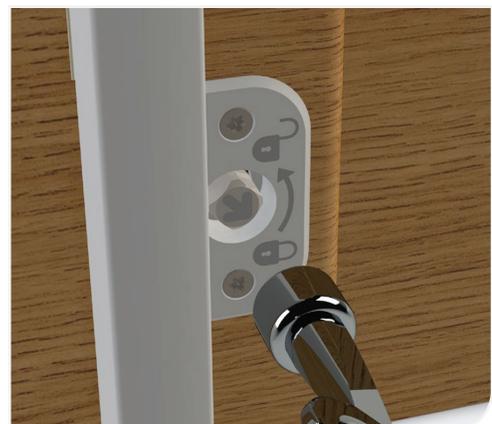

Key Features

- dual locking points, operated by a single key operation.
- clear locking indicator.
- provides reliable access in the event of a barricade.
- adjustable, retractable hook locks for secure locking.
- operates with the Lifeline Key system (same key can operate vision panels, locks, bolts etc).

Locked



Unlocked



Open




Specifications

Size	50x38x2100mm or 50x38x2400mm – can be trimmed from bottom to suit
Finish	Anodised aluminium and primed timber for paint on site by installer
Testing	BS EN 1935 equivalent (Hinge) 7,300 Cycles (equivalent to the use of twice a day for 10 Years) Anti-ligature tested to DHF TS001:2013 B4 (0.5mm wire test) Destruction tested to DD171 and medium secure abuse standard
Installation Requirements	Requires 142947 – security fixing pack for installation Requires 120337 – Lifeline butterfly key for installation and operation

Handing

The Securastop is handed, refer to the handing guide below to determine the correct handing.

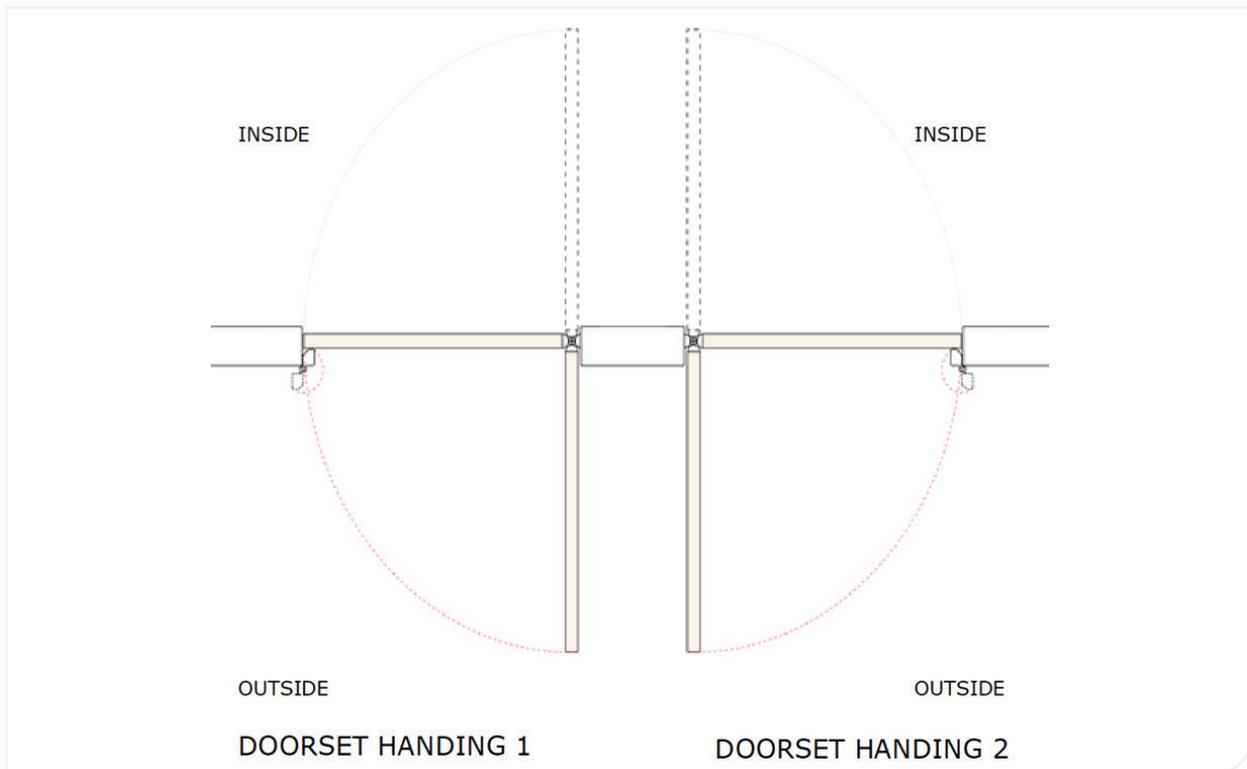



Layout & Clear Opening

This Securastop is designed to operate with Hipac PR-1 and PR-3S locksets with a minimum 82mm backset.


Please contact Hipac to confirm the correct layout and to calculate clear opening dimensions, as the following need to be considered:

- frame detail.
- wall thickness.
- door thickness.
- lockset function.
- hinge type.
- gap between door and frame.

Suggested layouts and guides as follows.

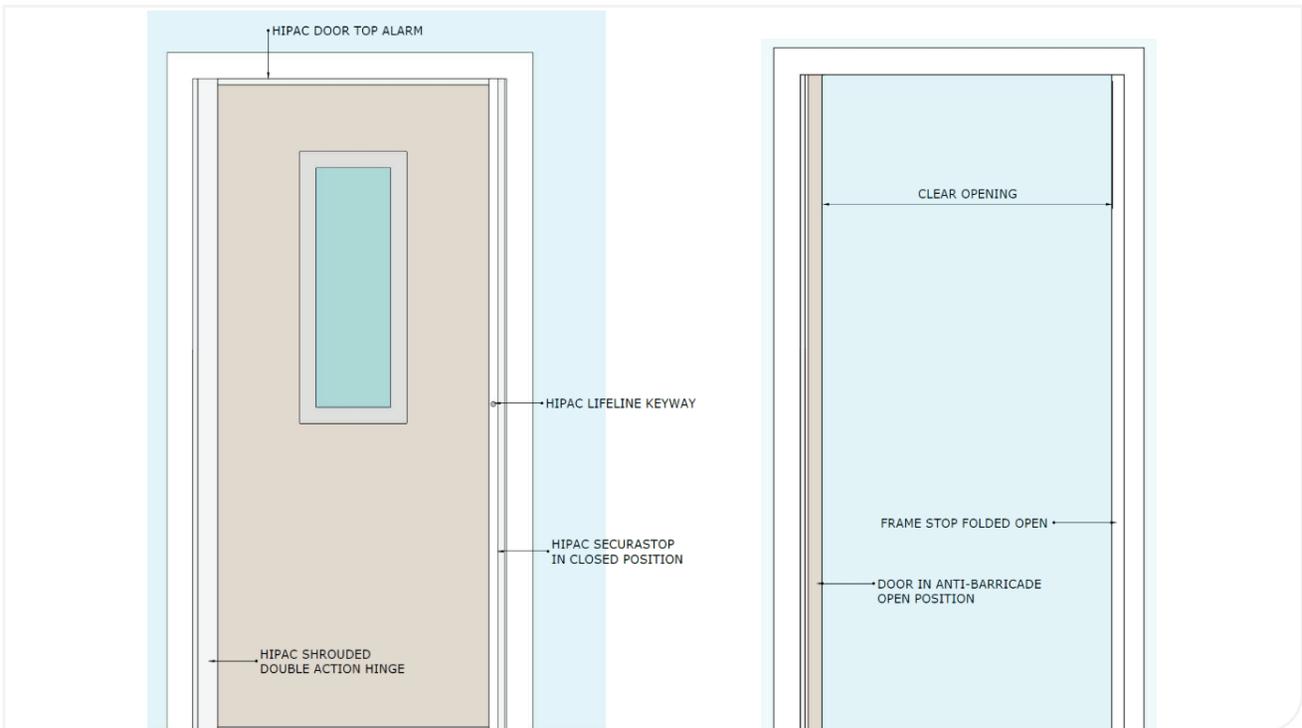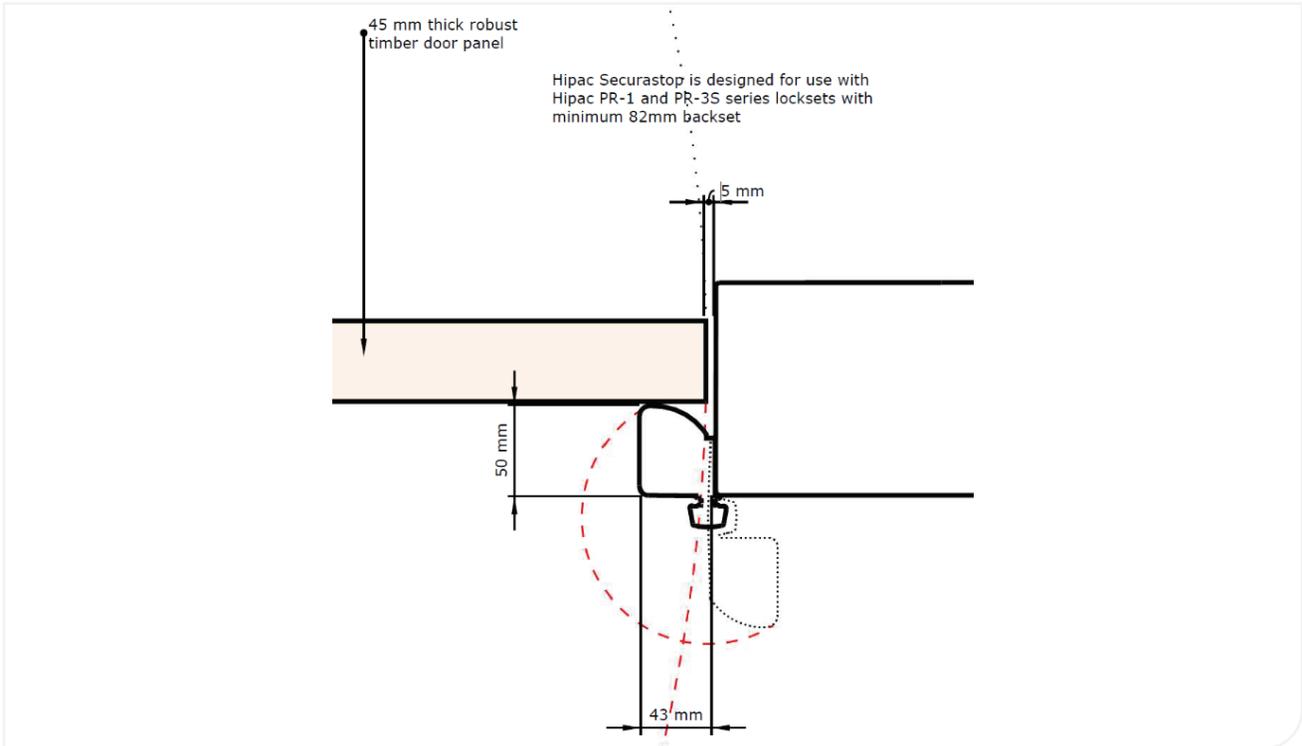

The Lifeline lock is typically fitted 1050mm from the top of the device.

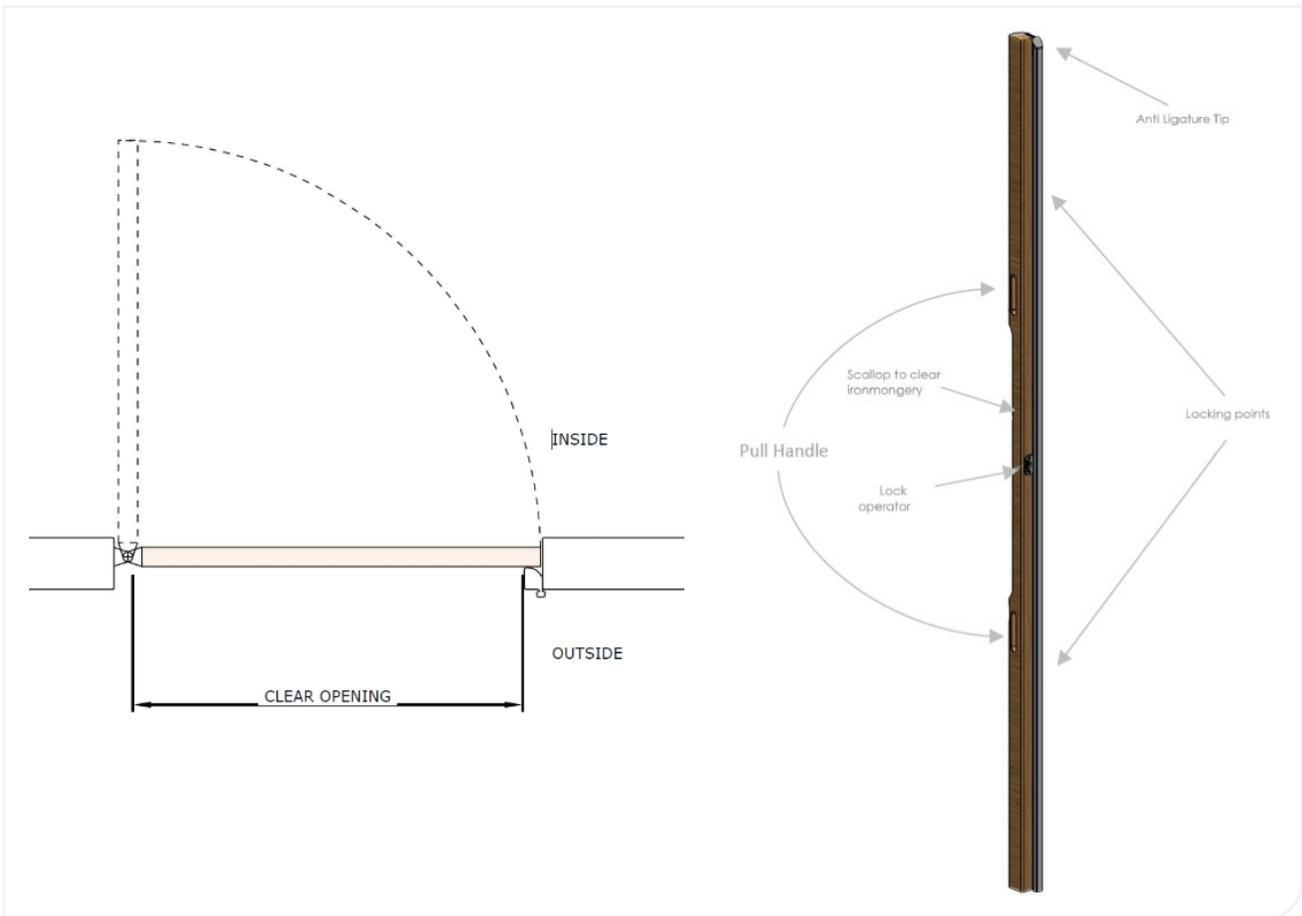

Disclaimer:

All products must be fitted as per the directions detailed in the individual product Installation Instruction Document. Hipac takes no responsibility for incorrect installation/operation of the product. By purchasing this product, you are confirming that the product will be fitted as per the instructions.

Please note that Hipac offers a range of measures designed to reduce the risk of self-harm or suicide and does not offer any guarantee that it will not take place. The solutions have been designed as a deterrent only.

ABOUT HIPAC

Operating at the forefront of healthcare, we strive to redefine what's possible. We provide superior products, design expertise and total solutions to help create environments where nothing stands in the way of patient care.

Contact information

-  1800 75 93 93
-  info@hipac.com.au
-  www.hipac.com.au

